

 
## R25 (1") Thread

### Coupling

R25-R25



Crossover coupling R25-R32

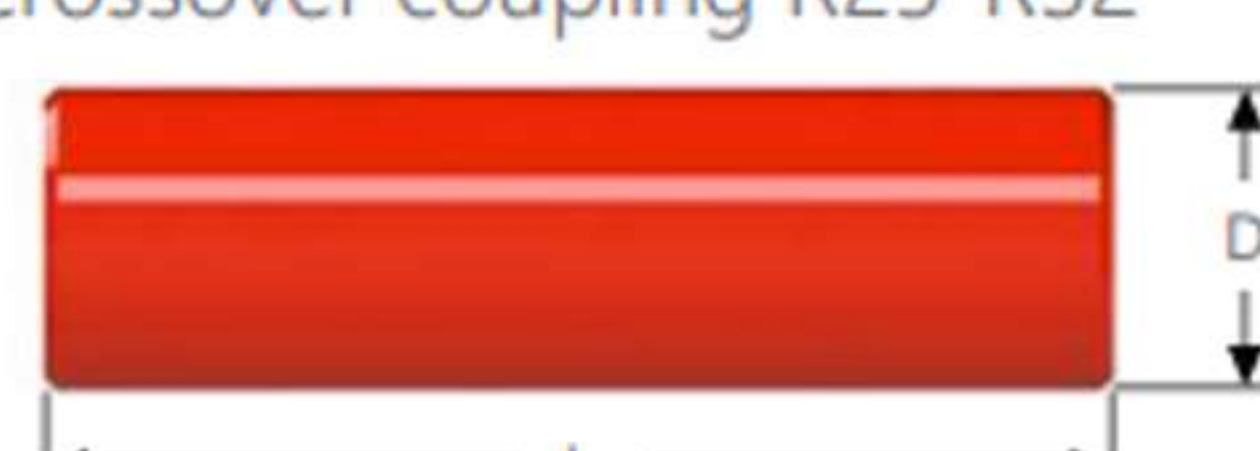

L (mm)	Dimensions D		Part no.
	mm	in	
140	34	1 11/32	MX-R253414
175	45	1 3/4	MX-R25R324517


## R28 (1 1/8") Thread
 
### Coupling

R28-R28



Crossover coupling R28-R32

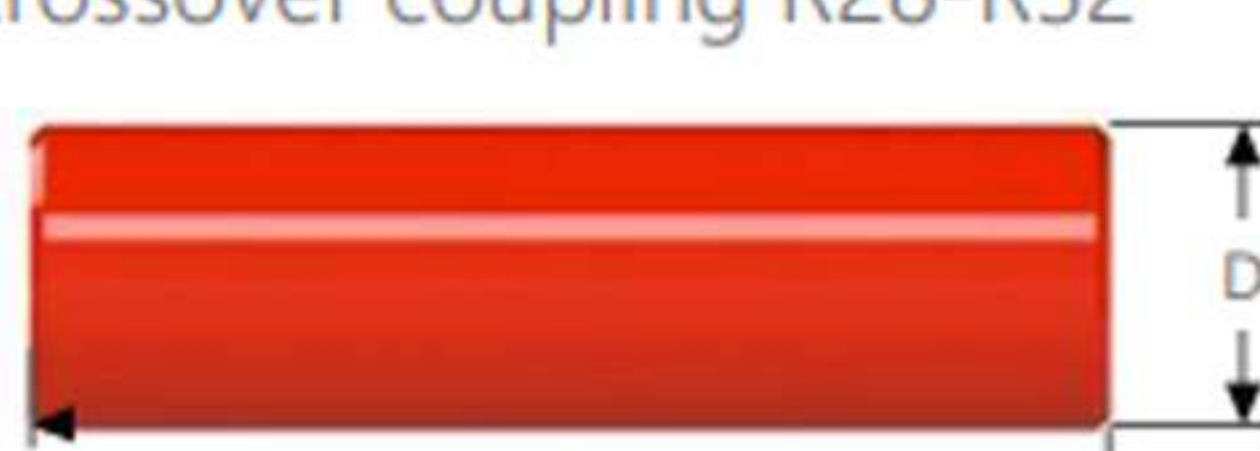

L (mm)	Dimensions D		Part no.
	mm	in	
160	37	1 29/64	MX-R283716
171	45	1 3/4	MX-R28R324517


## R32 (1 1/4") Thread
 
### Coupling

R32-R32



Crossover coupling R32-R35

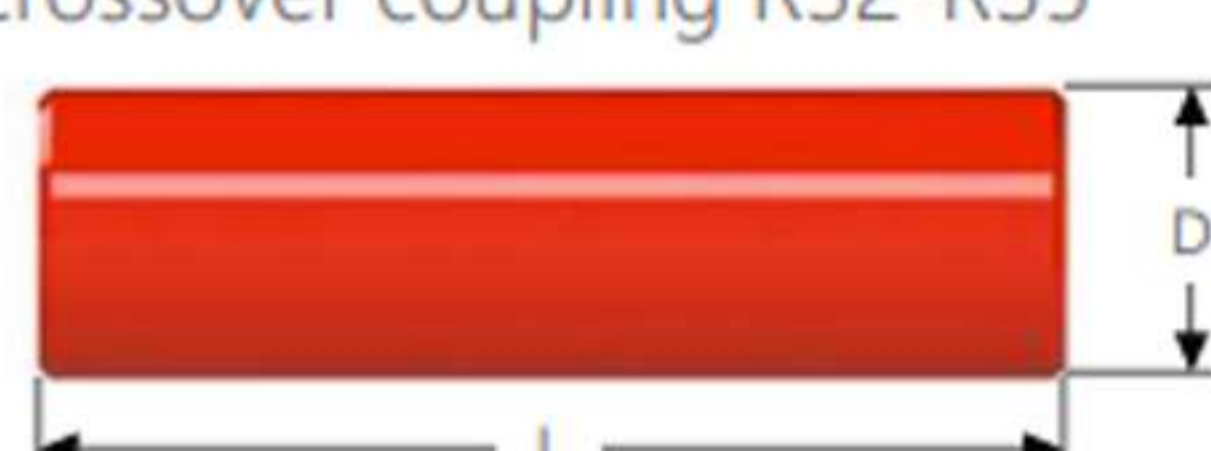

Crossover coupling R28-R32



Crossover coupling R32-R38



Crossover coupling R32-T38



Dimensions L		Dimensions D		Part no.
mm	in	mm	in	
150	6	45	1 3/4	MX-R324515
175	6 7/8	45	1 3/4	MX-R35R324517
171	6 3/4	45	1 3/4	MX-R32R284517
181	7 1/8	54	2 1/8	MX-R38R324518
188	7 1/2	54	2 1/8	MX-T38R324518


## R35 (1 3/8") Thread
 
### Coupling

R35-R35



Crossover coupling R32-R35

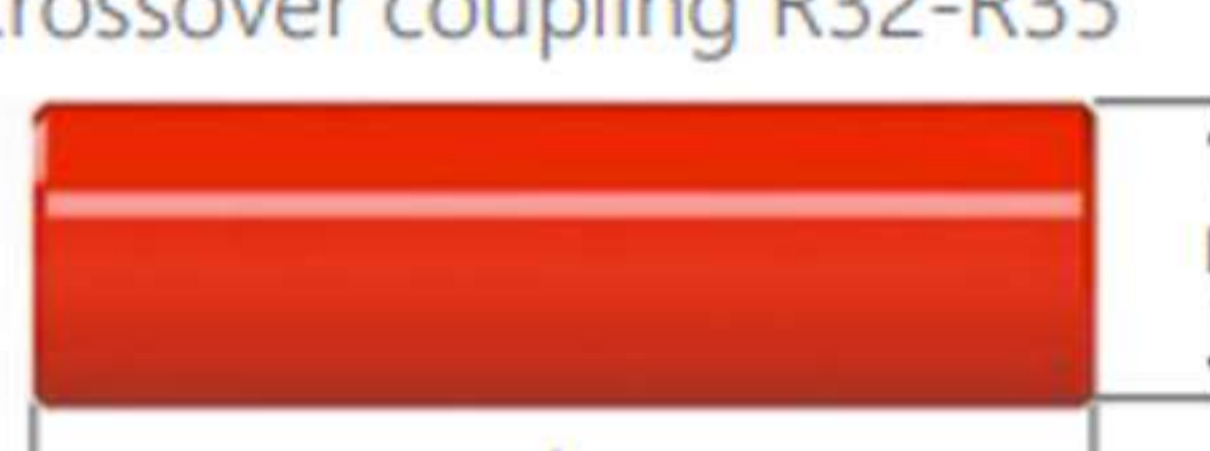

Dimensions L		Dimensions D		Part no.
mm	in	mm	in	
160	6 1/4	48	1 7/8	MX-R354816
171	6 3/4	48	1 7/8	MX-R35R324817

## Bench & long hole Drilling

 
## T38 (1 1/2") Thread

### Coupling

T38-T38



Crossover coupling T38-R32

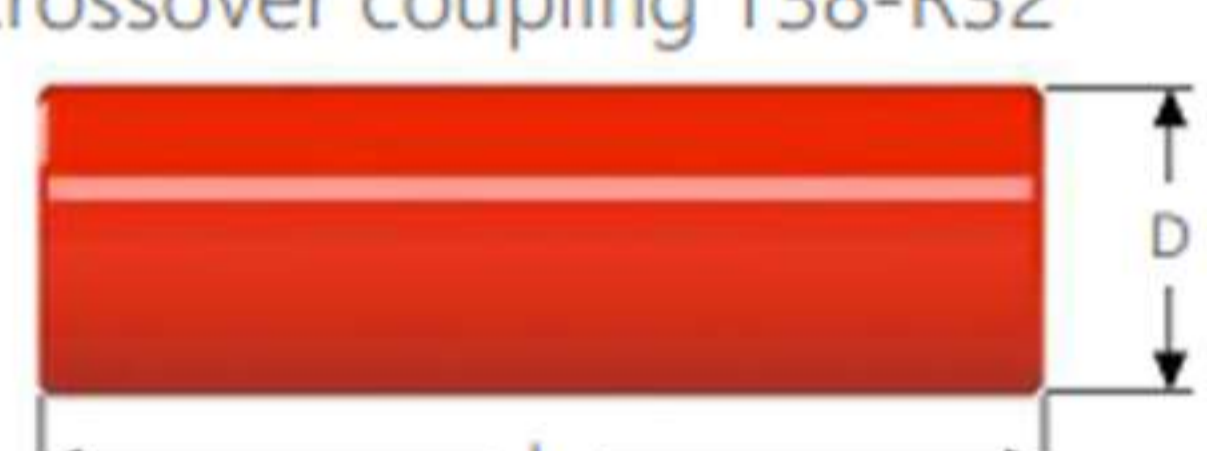

Crossover coupling T38-T45



Dimensions L			Dimensions D		Part no.
mm	ft	in	mm	in	
190	7	1/2	54	2 1/8	MX-T385419
188	7	1/2	54	2 1/8	MX-T38R325418
215	8	1/2	66	2 1/2	MX-T38T456621

## T45 (1 3/4") Thread

### Coupling

T45-45



Crossover coupling T45-T38



Crossover coupling T45-T51



Dimensions L			Dimensions D		Part no.
mm	ft	in	mm	in	
207	8	1/8	66	2 3/5	MX-T456620
215	8	1/2	66	2 1/2	MX-T45T386621
240	9	1/2	72	2 7/8	MX-T45T517224

## Bench & long hole Drilling

## T51 (2") Thread

### Coupling

T51-T51



T51-T51



Crossover coupling T51-T45



Dimensions L			Dimensions D		Part no.
mm	ft	in	mm	in	
235	9	1/4	72	2 1/8	MX-T517223
235	9	1/4	77	3	MX-T517723
240	9	1/2	72	2 7/8	MX-T51T457224